

COMPONENT	LOCATION	201-PG	FIG.	CONN
Airbag Fuse Box	Under LH I/P, near Fuse Block 2.....	06		A
Battery	RH Rear Engine Compartment, behind Strut Tower.....	01		A
Fuse Block 1	RH Engine Compartment, front of Battery.....	01		A
C1 (3 Cavities).....	Main Harness to Fuse Block 1, below Fuse Block 1.....	01		A
C2 (1 Cavity)	Main Harness to Fuse Block 1, below Fuse Block 1.....	01		A
C3 (1 Cavity)	Main Harness to Fuse Block 1, below Fuse Block 1.....	01		A
C4 (2 Cavities).....	Main Harness to Fuse Block 1, below Fuse Block 1.....	01		A
Fuse Block 2	Under LH I/P.....	06		A
Generator.....	RH lower front of Engine			
Ignition Switch	On Steering Column	06		A
Power Windows Circuit				
Breaker (4-Door LSi)	LH I/P, mounted to Fuse Block 2	06		A
Starter Solenoid	On lower RH side of Engine, on Starter Motor.....	05		A
G100.....	LH Front Inner Fender	00		A
G103.....	RH Rear Engine Compartment mounted to Intake Manifold..	02		A
P201	RH Rear Engine Compartment on Bulkhead, near Battery	01		A
S240	Main Harness, near Fuse Block 2			
